

Ez-Tex SprayAll Parts List

1. Hopper
2. Clamp
3. Hopper elbow
4. Tip holder
5. 15mm Tip
6. 8 mm Tip
7. Main body O-ring
8. Main body
9. Tips O-ring
10. S. Steel tip
11. Air vale assemble
12. 45 x 1/2" street elbow
13. Special main air valve adapter
14. Adapter O-ring
15. Valve guard
16. Main air valve
17. Air adapter
18. Air plug

